


Front Seat Control Switch


Removal

NOTE: Driver seat shown, passenger seat similar.

1. Remove the front seat.
Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).
2. Remove the front seat side shield screws.

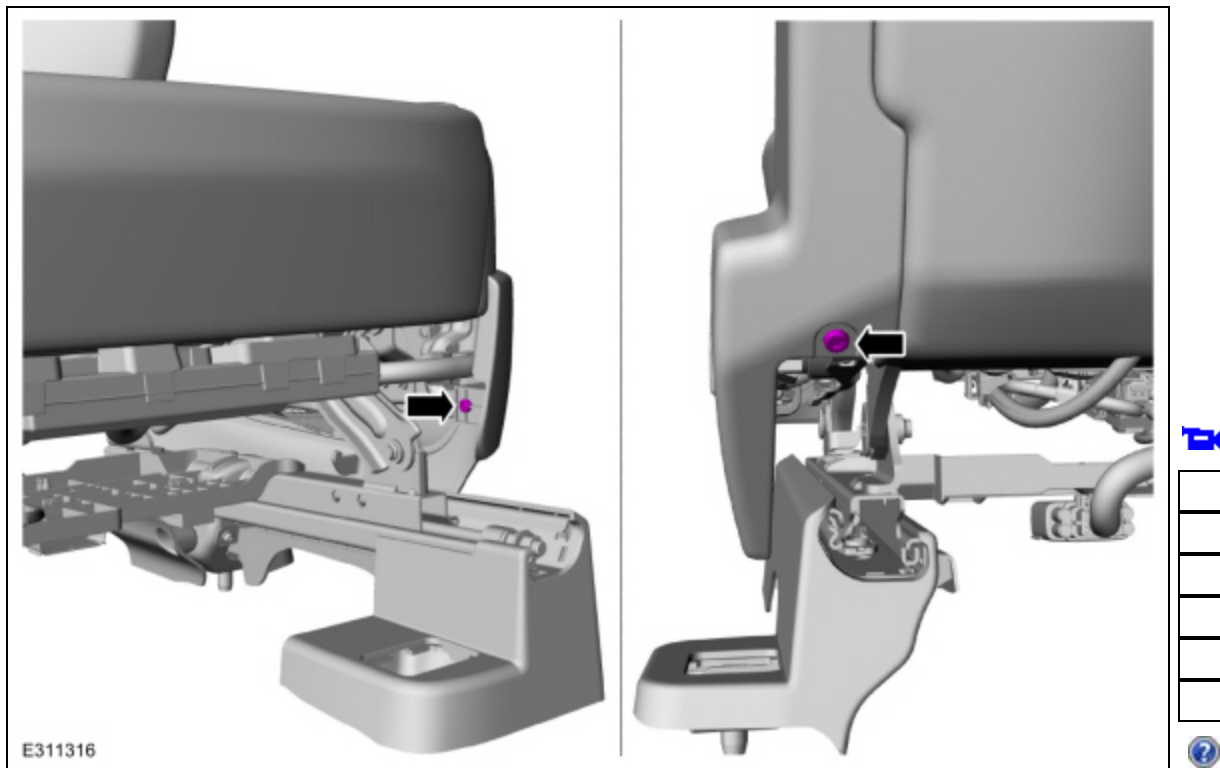


3.
 1. Firmly grasp the front seat side shield, lift up and out, separating the front seat side shield from the recliner bracket.
 2. Slide the front seat side shield forward and separate the front seat side shield from the seat.

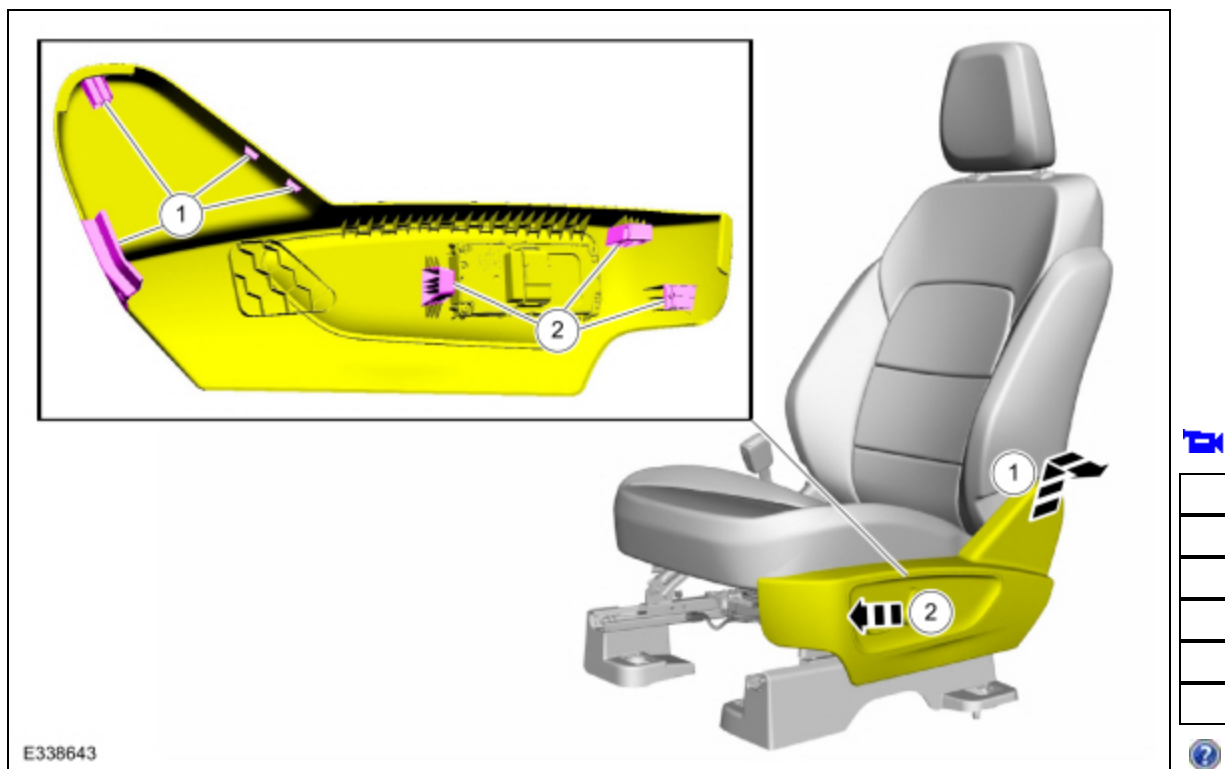


4. Disconnect the electrical connector and remove the front seat side shield



5. Remove the front seat control switch knob(s).

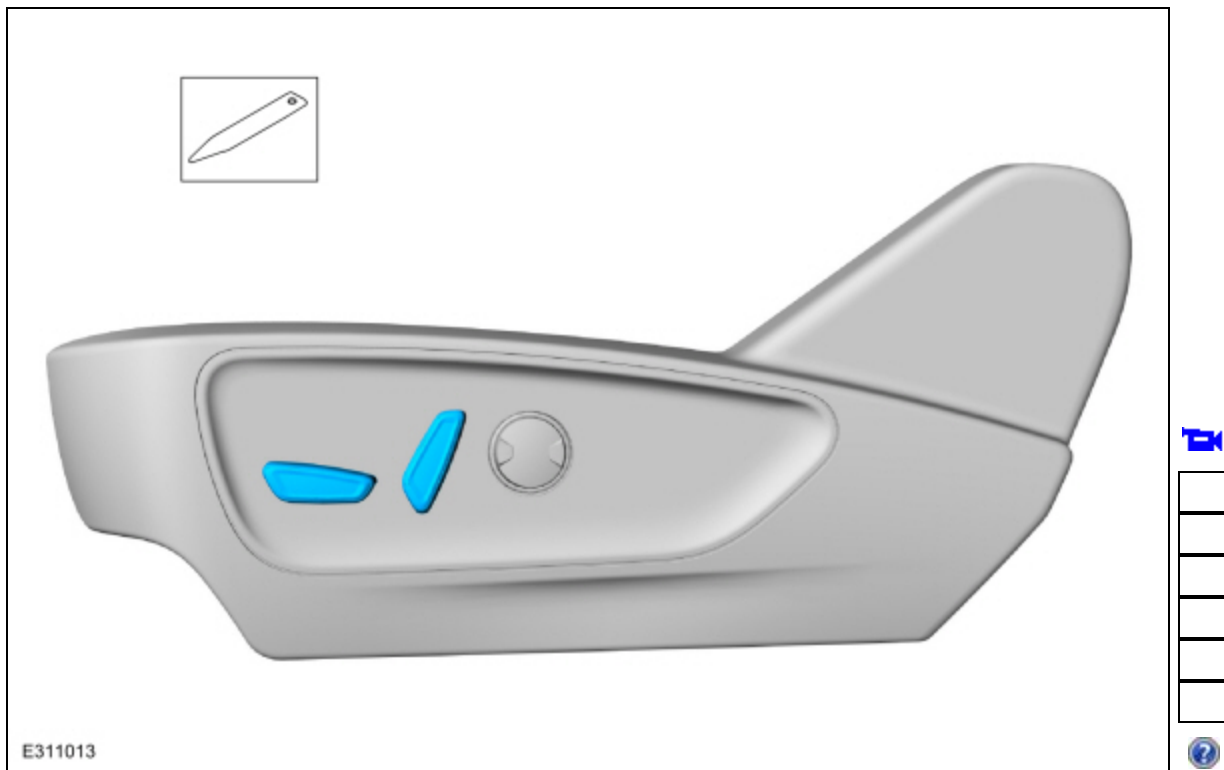

6. Remove the screws and the front seat control switch.

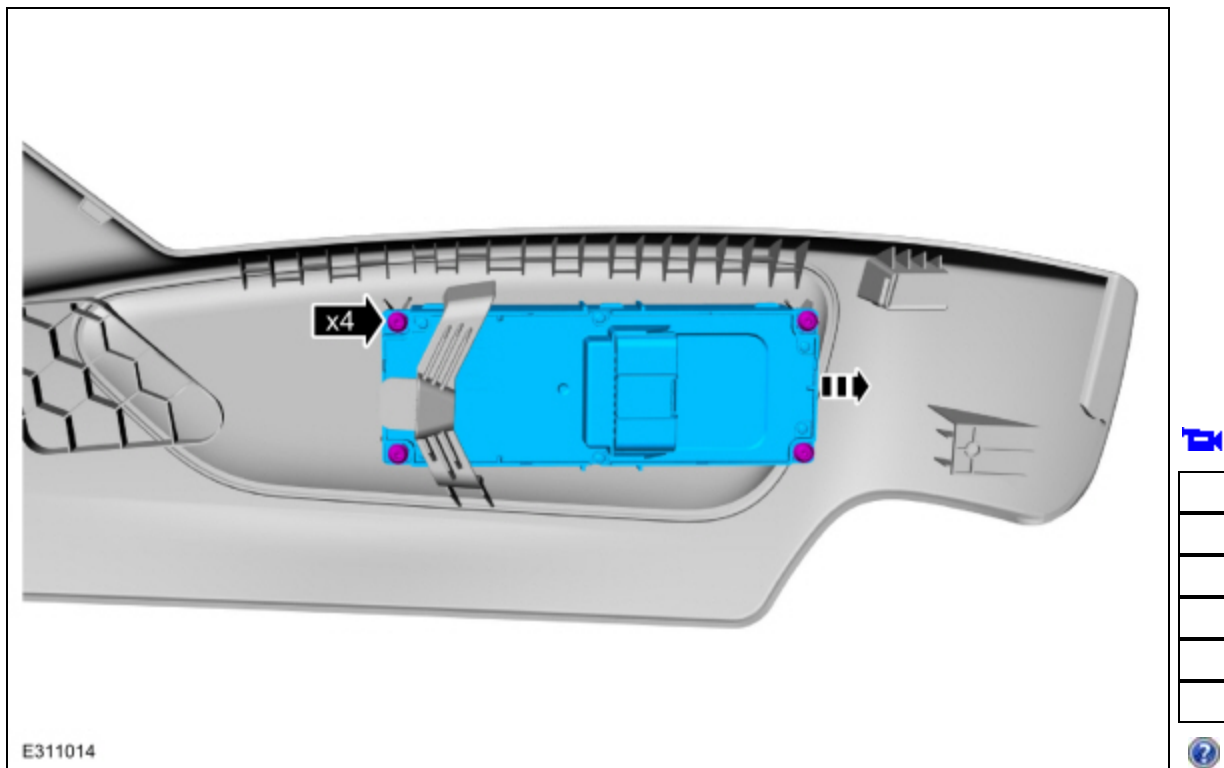

Installation

1. To install, reverse the removal procedure.

