


Floor Console




Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Release the clips and remove the trim panel.
 - Disconnect the electrical connectors.

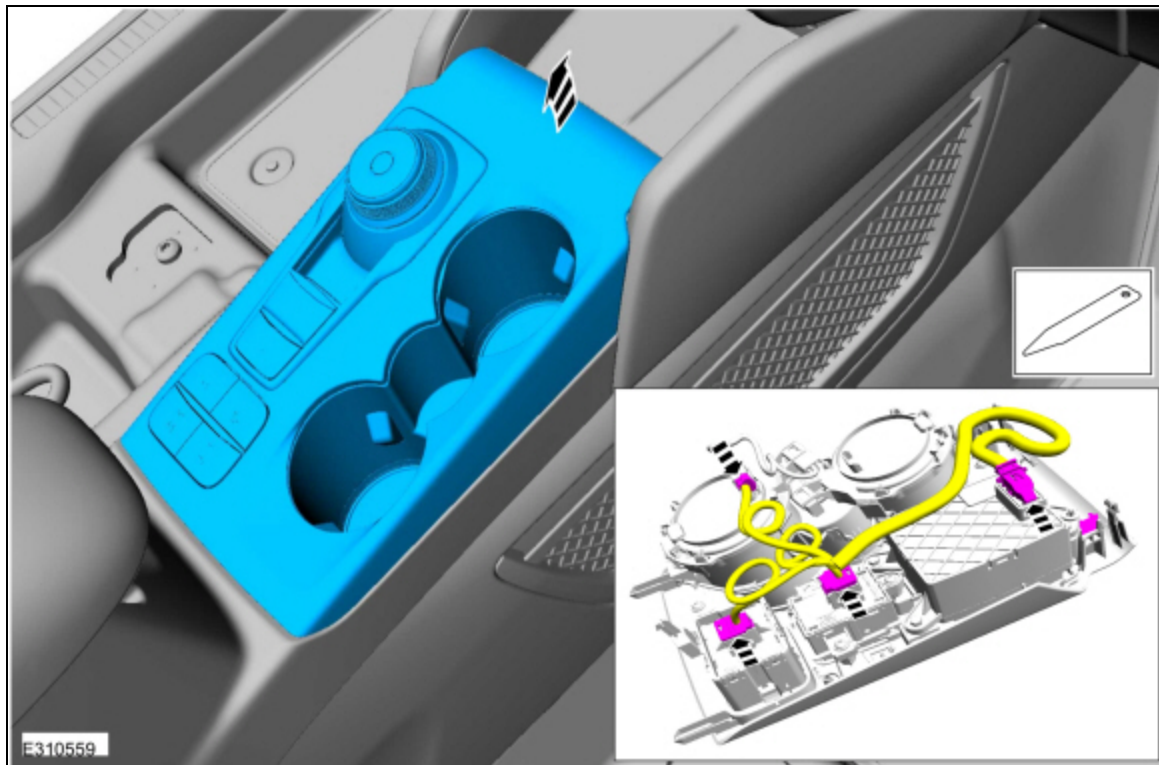


2. Release the clips and remove the RH floor console side trim panel.

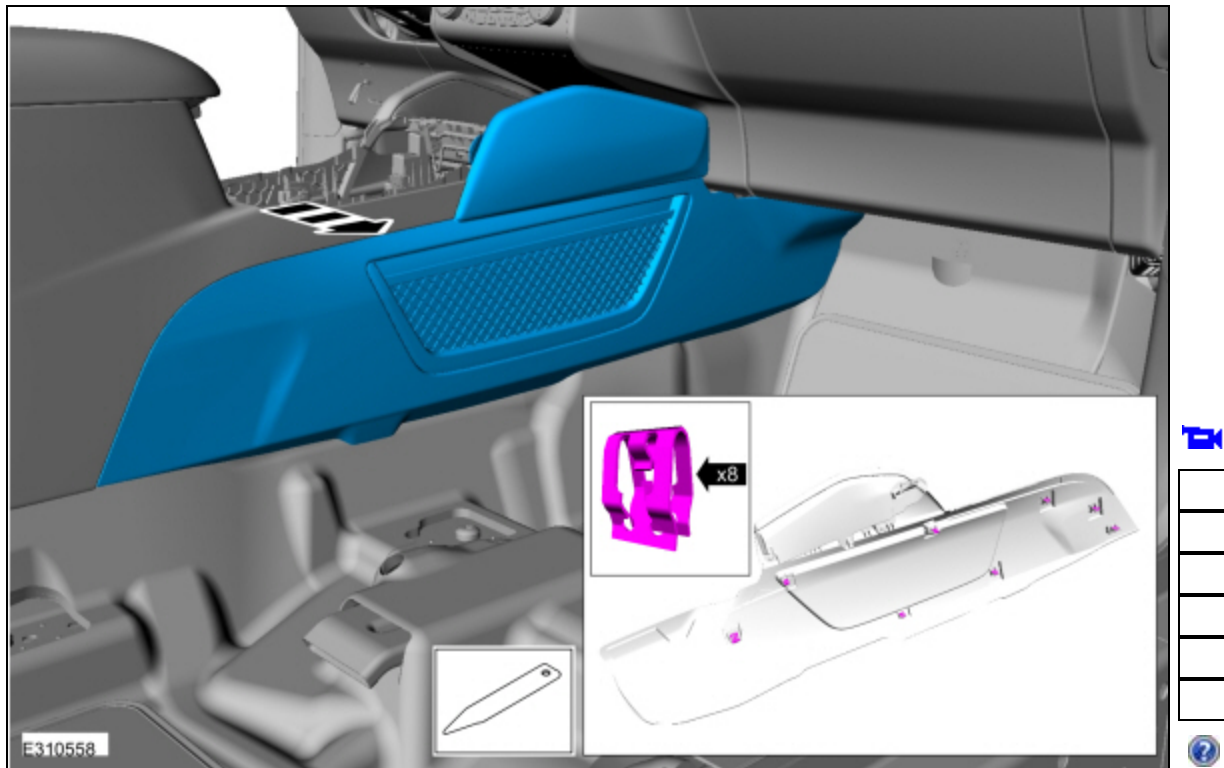


3. **NOTE:** LH side of floor console.


1. Remove the cover.
2. Remove the bolt.

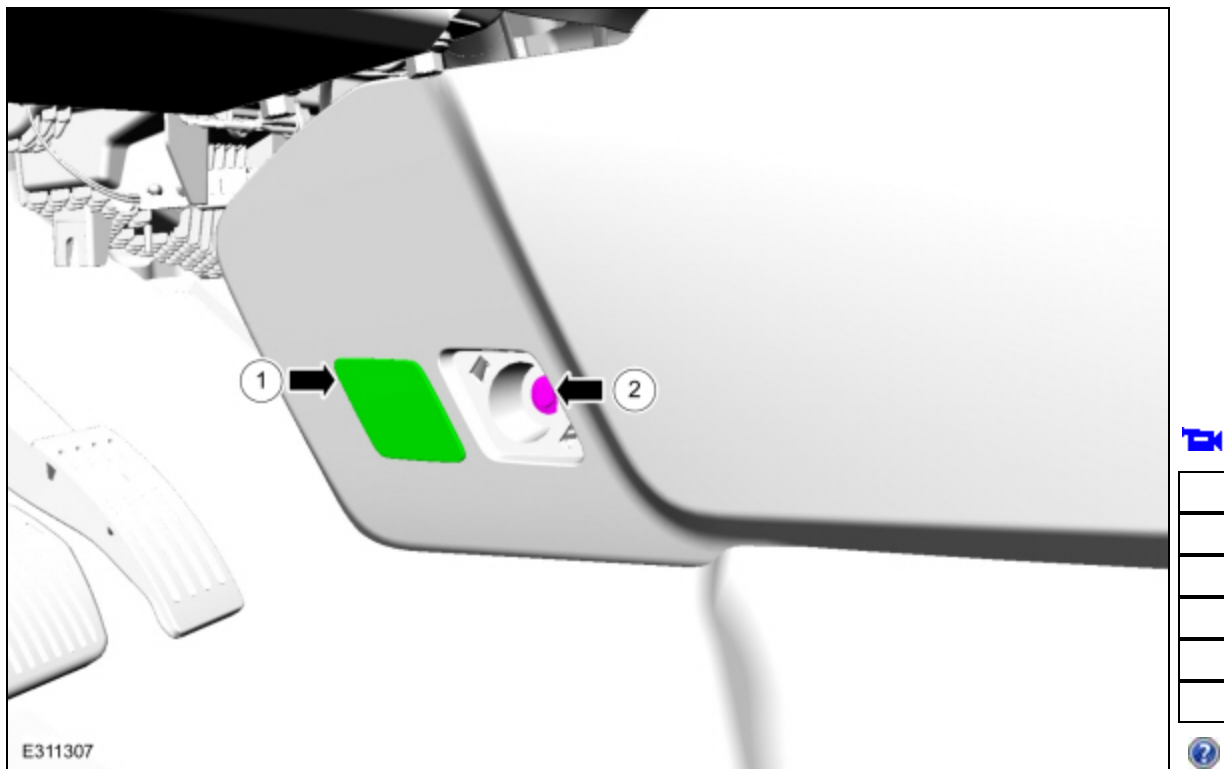


4. Release the clips and remove the LH floor console side trim panel.

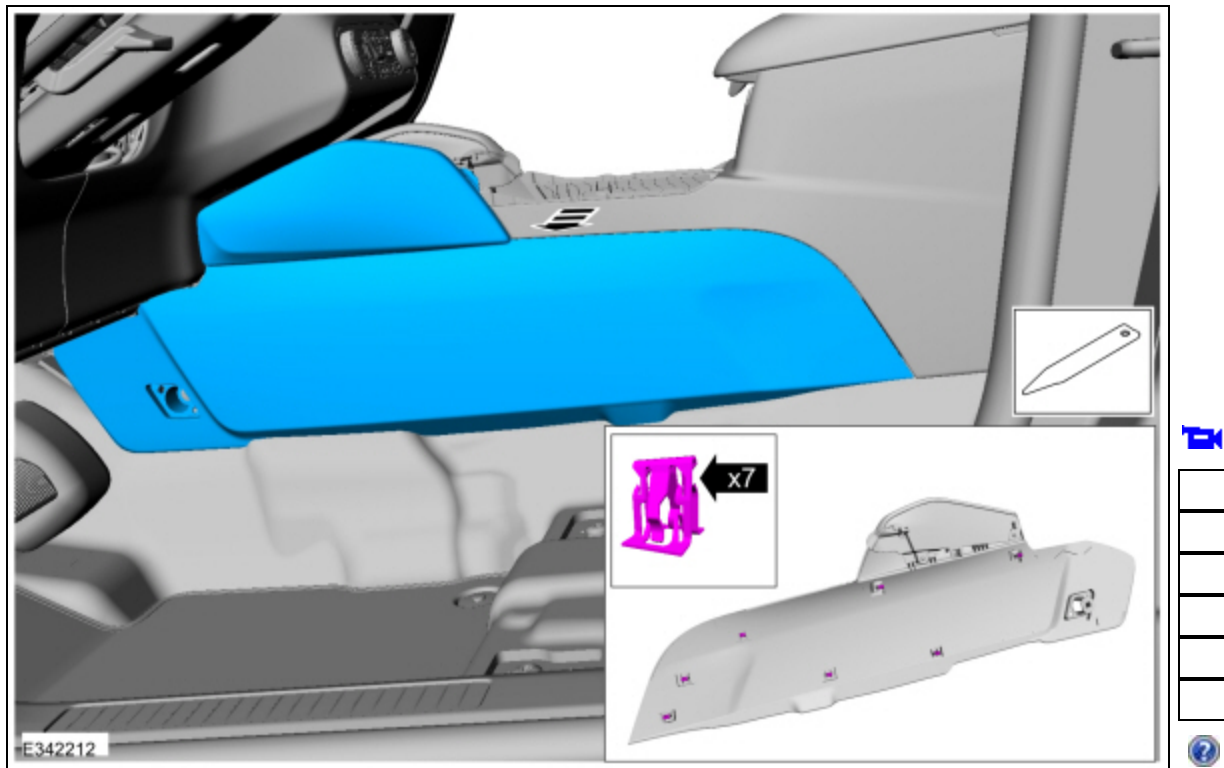

5. Remove the bolts, release the clips and harness retainers and remove the trim panel.
- Disconnect the electrical connectors.

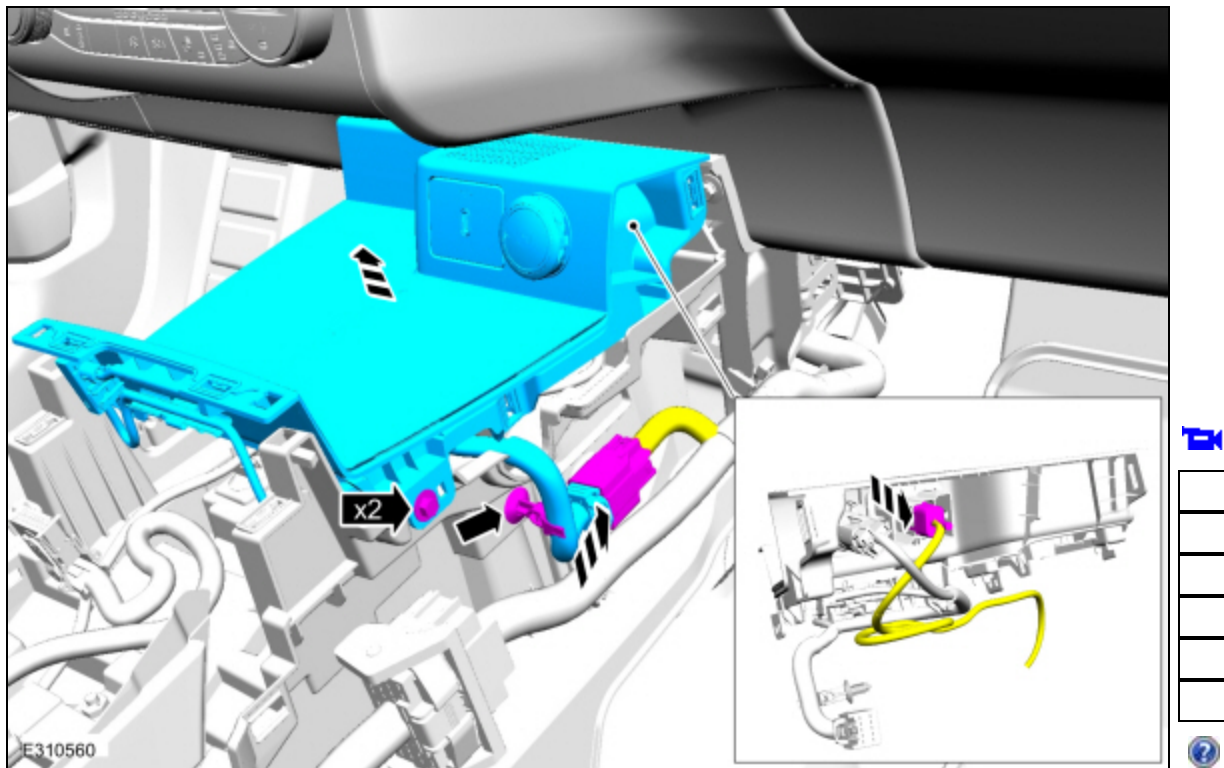


6. Release the clips and remove the rear floor console trim panel.
- Disconnect the electrical connector.

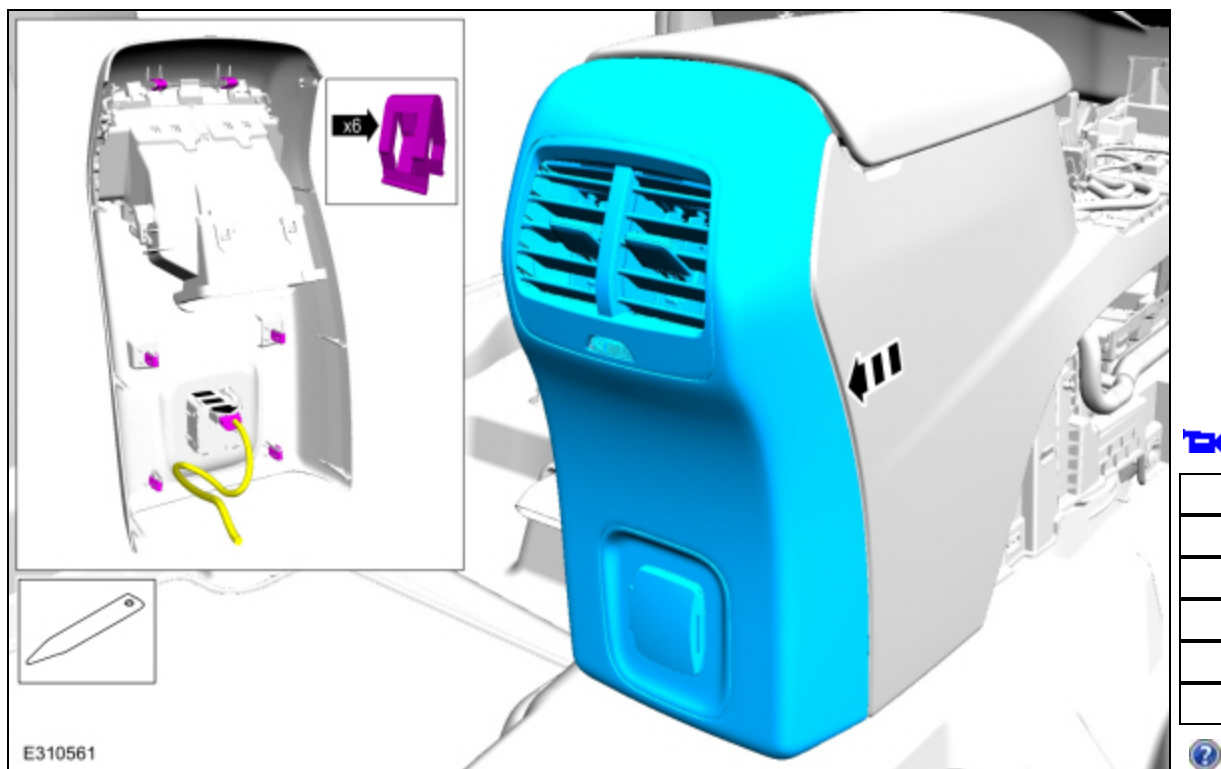


7. **NOTE:** LH side of floor console.

Disconnect the electrical connector, detach the harness retainer and position aside the harness.

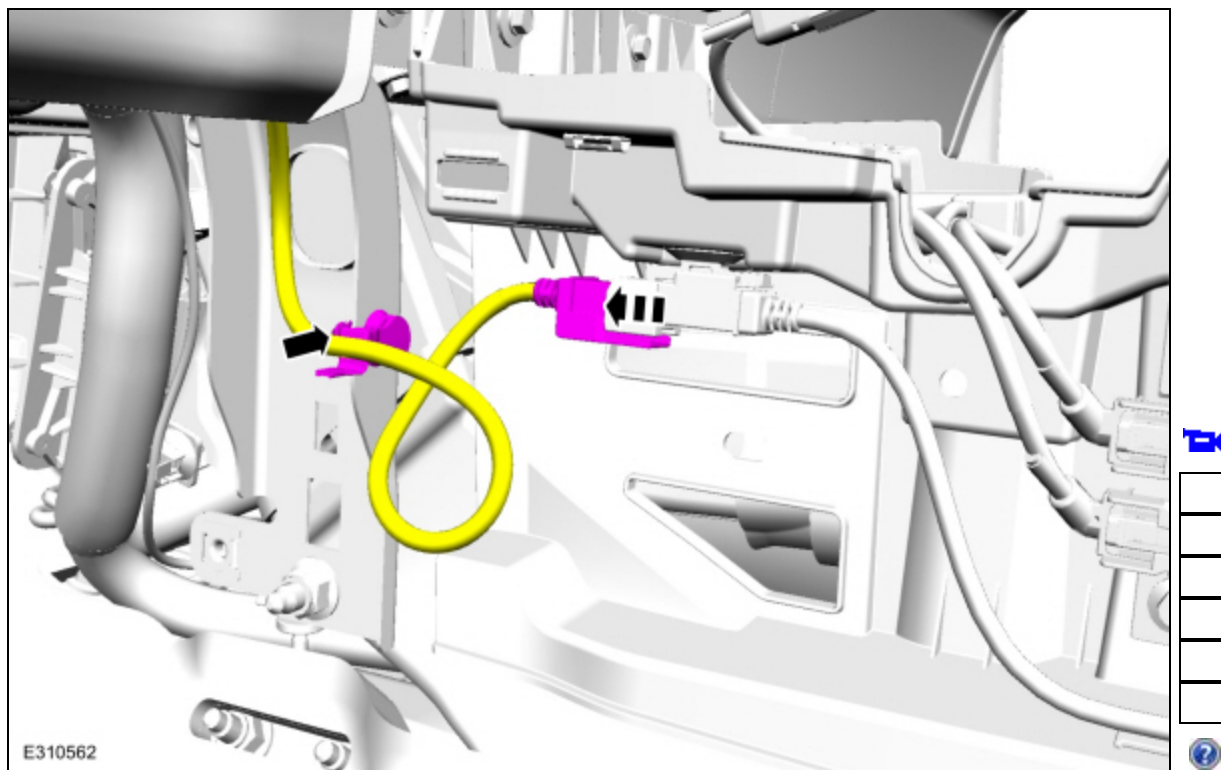

- 8.
- Remove the bolts and remove the floor console.
 - Disconnect the electrical connector, detach the harness retainer and position aside the harness.

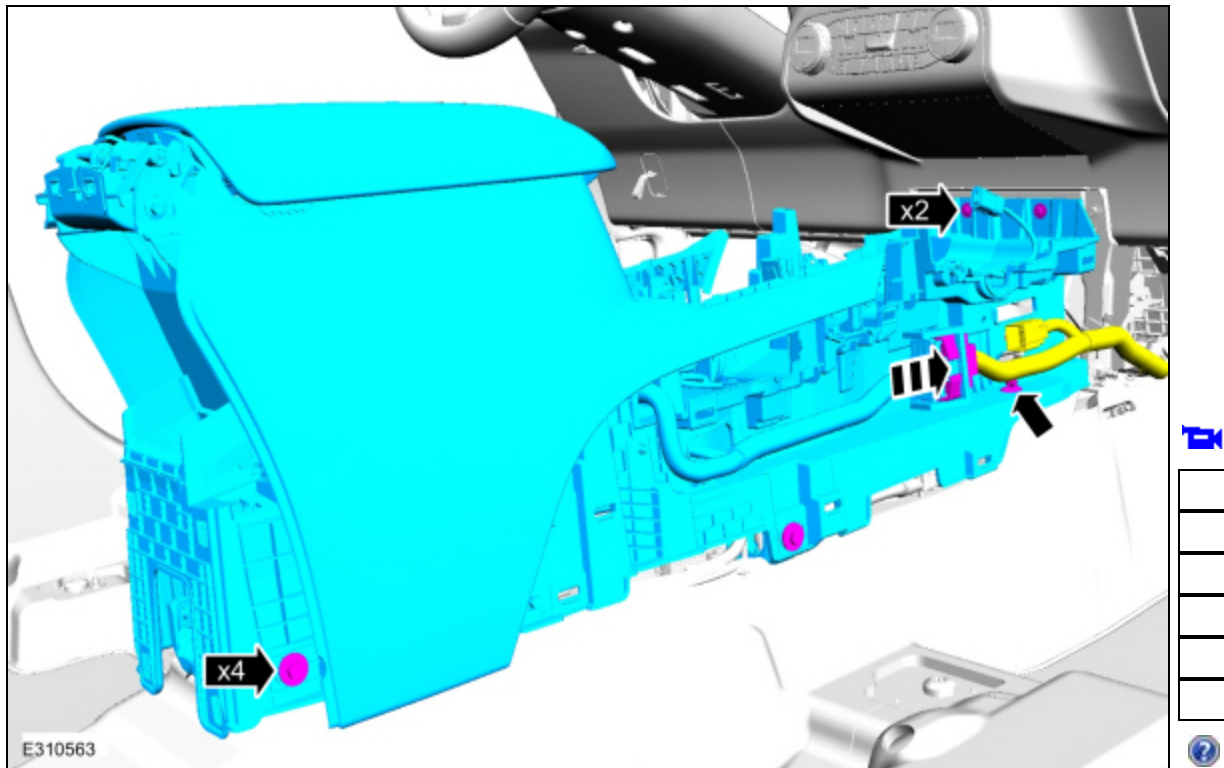

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** Anytime the parking brake switch electrical connector has been disconnected, the EPB system is deactivated and a DTC is stored in the ABS module. Perform the following EPB step to restore the system and clear the ABS module DTC.

Apply and release the parking brake twice within 5 seconds, pausing with the switch in the NEUTRAL position for approximately one-half second between each apply and release.

© Copyright 2026, Ford Motor Company.