


Liftgate Trim Panel

Special Tool(s) / General Equipment


Interior Trim Remover

Removal


1. Release the clips and remove the upper liftgate trim panel.
Use the General Equipment: Interior Trim Remover

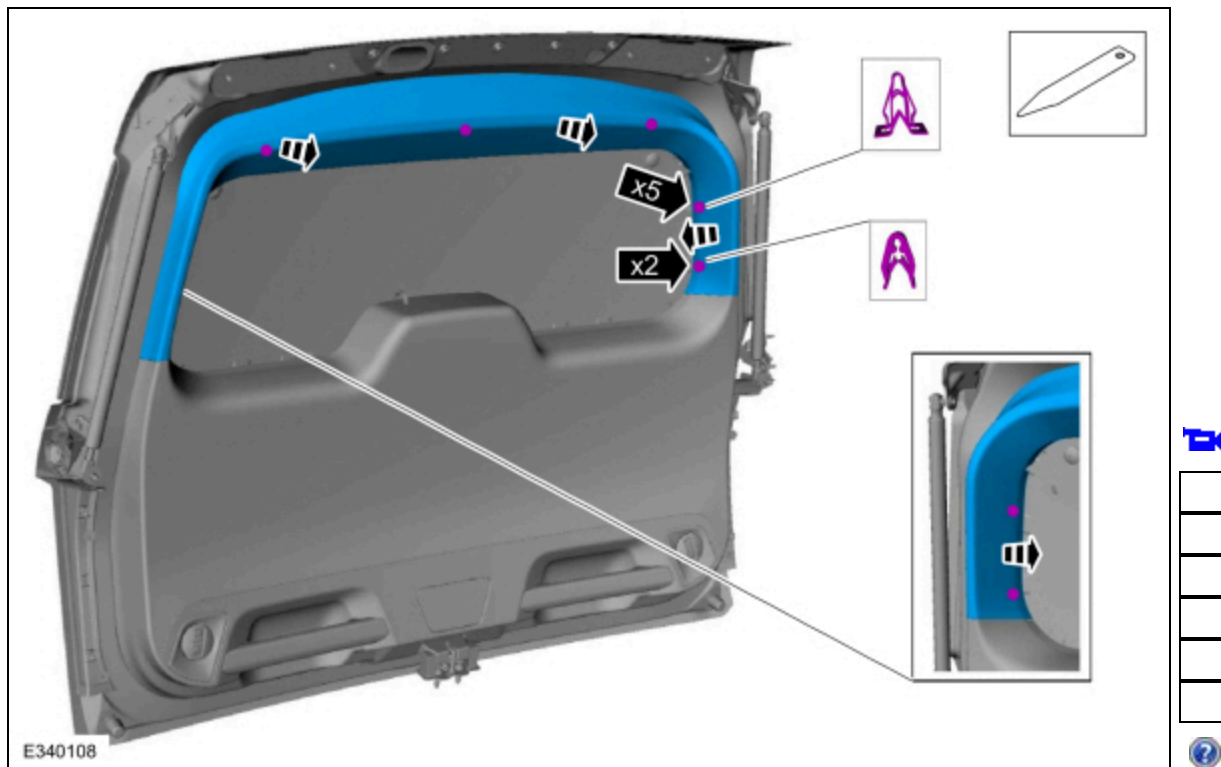

2. Release the clips and tabs and remove the liftgate handle bolt covers.
Use the General Equipment: Interior Trim Remover

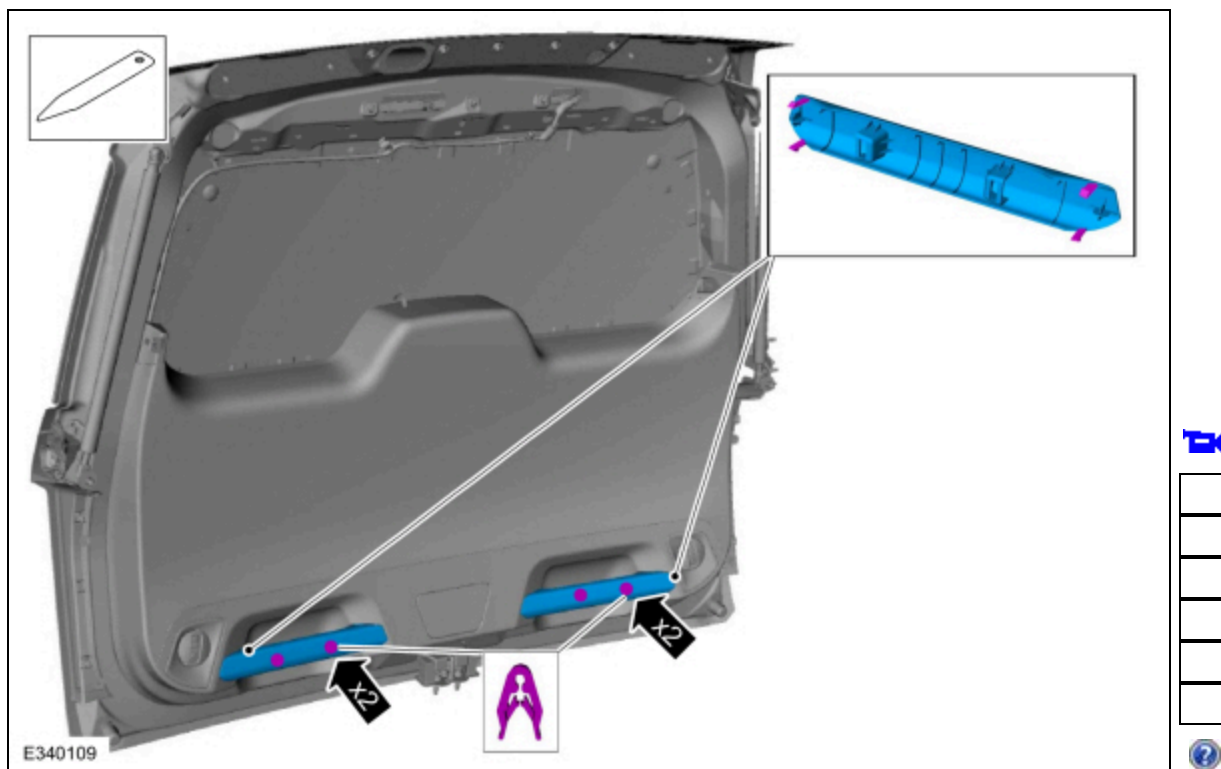

3. Remove the liftgate trim panel screws.

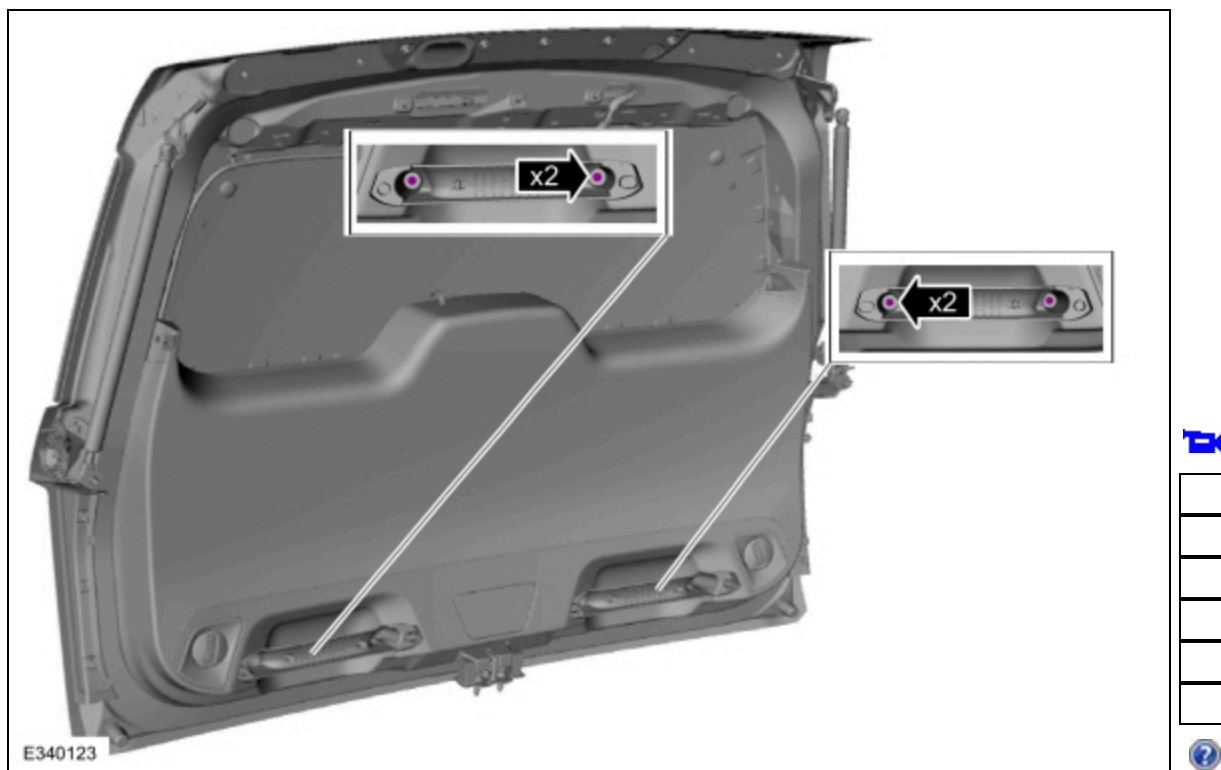

4. Remove the lower liftgate trim panel.
1. Release the clips.
Use the General Equipment: Interior Trim Remover
 2. Disconnect the liftgate trim panel interior lamps electrical connector.

