
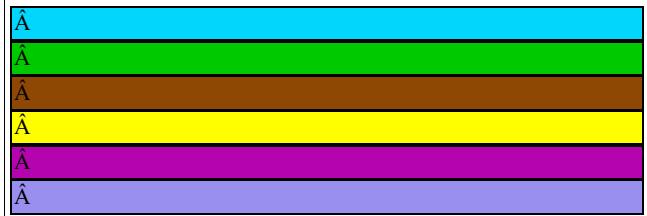


## Front Seat Power Lumbar Assembly

### Removal

**NOTE:** Driver seat shown, passenger seat similar.

1. Remove the front seat backrest cover and foam as an assembly.  
Refer to: Front Seat Backrest Cover (501-10A Front Seats, Removal and Installation).
2. Remove the front seat power lumbar assembly.
  1. Disconnect the electrical connector.
  2. Detach the upper J-hooks.
  3. Detach the middle J-hooks.
  4. Detach the lower J-hooks.

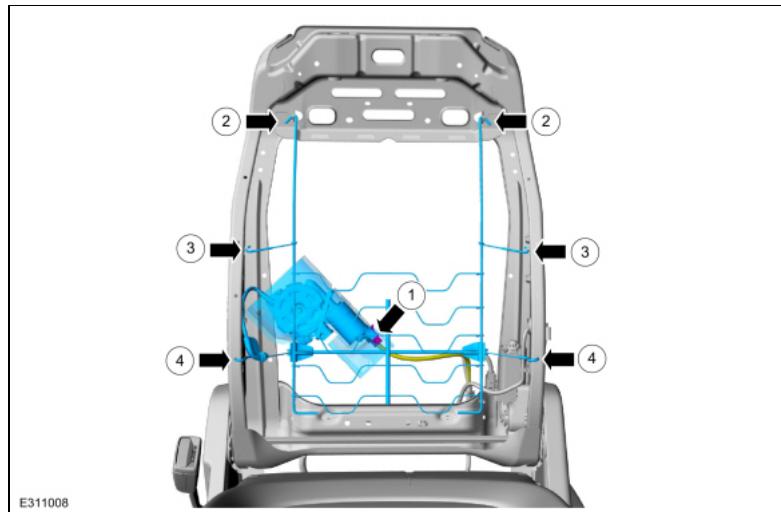

### Installation

1. To install, reverse the removal procedure.