

Front Seat Track



Removal

1. Remove the front seat cushion cover and foam as an assembly.
Refer to: Front Seat Cushion Cover (501-10A Front Seats, Removal and Installation).
2. Remove the front seat backrest.
Refer to: Front Seat Backrest (501-10A Front Seats, Removal and Installation).
3. Remove the front seatbelt buckle.
Refer to: Front Seatbelt Buckle (501-20A Seatbelt Systems, Removal and Installation).
4. Remove the front seat position sensor.
Refer to: Seat Position Sensor (501-20B Supplemental Restraint System, Removal and Installation).

Installation

1. **NOTE:** Transfer components to the seat track as necessary.

To install, reverse the removal procedure.