

# Loadspace Trim Panel



## Special Tool(s) / General Equipment

Interior Trim Remover


## Removal

**NOTE:** Left hand (LH) shown, right hand (RH) similar.


1. Remove the following items:
1. Remove the rear scuff plate trim panel.  
Refer to: Rear Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. Remove the D-pillar trim panel.  
Refer to: D-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Remove the loadspace scuff plate trim panel.  
Refer to: Loadspace Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Position the liftgate weatherstrip aside.

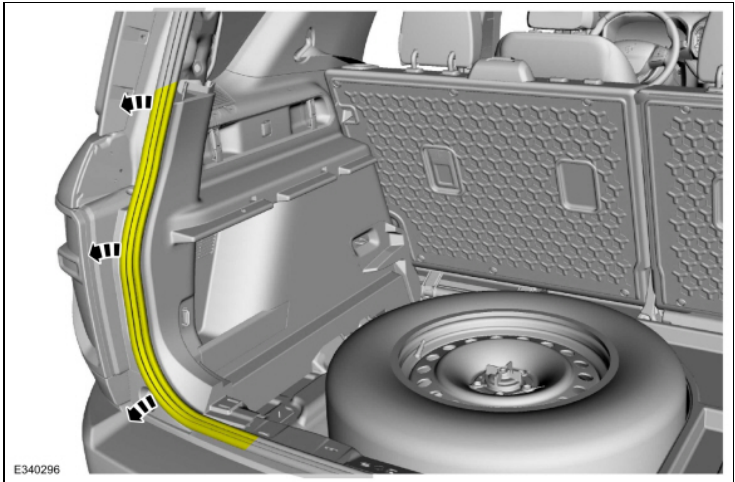


3. Remove the floor storage bin.

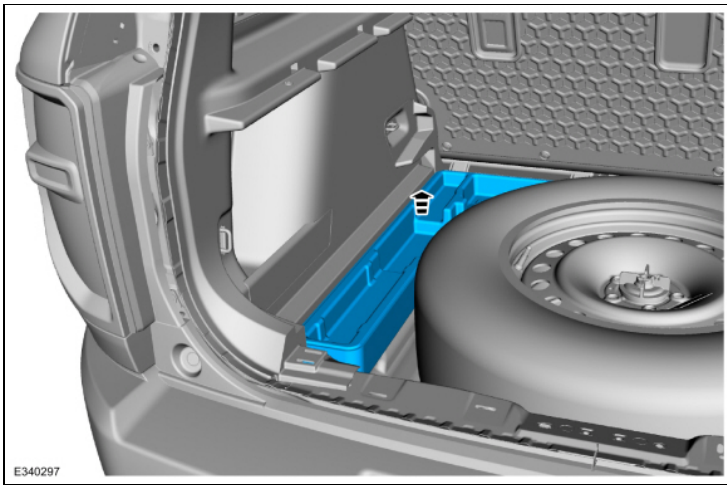

4. Remove the rear seat backrest.  
Refer to: Rear Seat Backrest (501-10B Rear Seats, Removal and Installation).

#### Left hand side

5. Remove the loadspace trim panel.
  1. Release the loadspace trim panel clips.  
Use the General Equipment: Interior Trim Remover
  2. Position the rear seatbelt retractor and pretensioner through the opening in the loadspace trim panel.
  3. Disconnect the power outlet electrical connector.

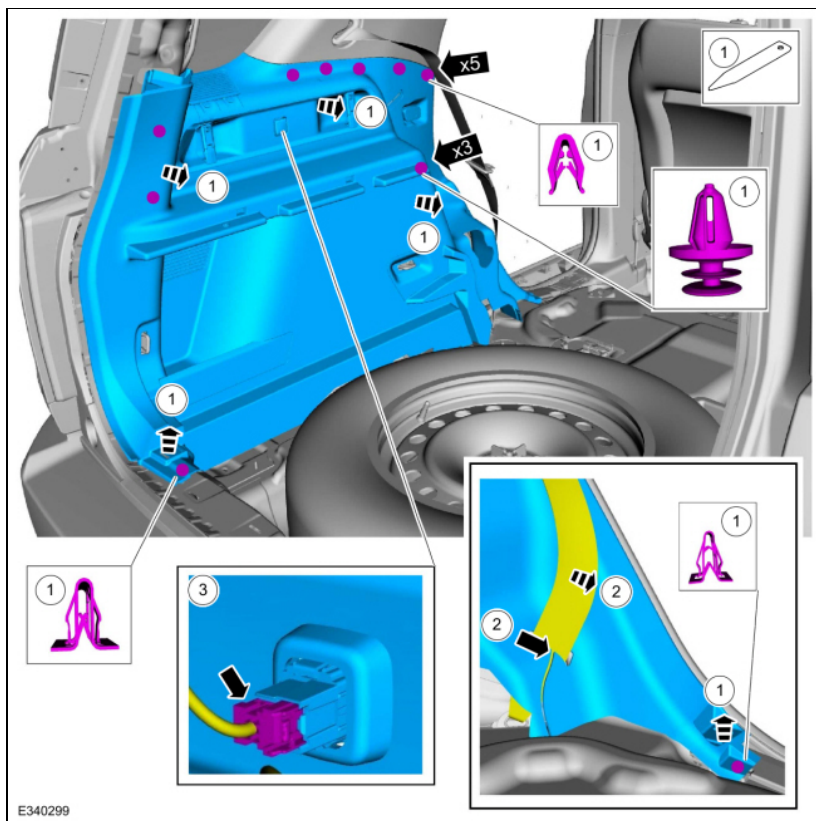

#### Right hand side

6. Remove the loadspace trim panel.
  1. Release the loadspace trim panel clips.  
Use the General Equipment: Interior Trim Remover
  2. Position the rear seatbelt retractor and pretensioner through the opening in the loadspace trim panel.
  3. Disconnect the power outlet electrical connector.
  4. Disconnect the loadspace trim panel interior lamp electrical connector.
  5. Disconnect the power point electrical connector.

