

# ROOF SPOILER

## INSTALLATION MANUAL



SATIN BLACK PART NUMBER: VM1PZ-9944210-A  
SHADOW BLACK PART NUMBER: VM1PZ-9944210-BA  
CARBONIZED GRAY PART NUMBER: VM1PZ-9944210-CA

### BEFORE INSTALLING



**WASH & CLEAN  
PROPERLY**





**WE RECOMMEND  
2 PERSONS FOR  
INSTALLATION**

### AFTER INSTALLING






**DO NOT WASH  
IN 24 HRS**
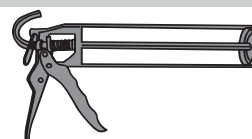
### TOOLS



### CHECK LIST

*\*INCLUDED ON THE PART*

ITEM	DESCRIPTION	DRAWING	AMOUNT
A	*VHB TAPE		N/A
B	*NITTO FOAM		1 PC
C	POLYURETHANE ADHESIVE 310 ml		1 PC




THE IDEAL TEMPERATURE RANGE OF THE PART AND THE VEHICLE WHEN INSTALLING MUST BE 16°C (60°F) TO 40°C (104°F), THIS GUARANTEES A CORRECT ASSEMBLY.

## 1 CLEAN




REMOVE ANY DETERGENT, WAX OR DETAILING RESIDUE

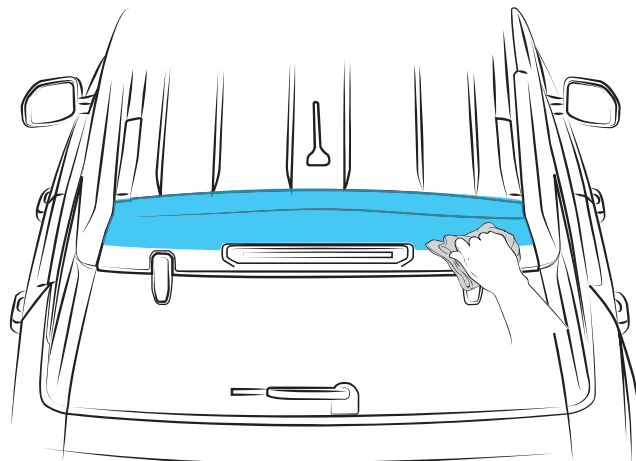


## 2 TEST FIT THE PART



ALIGN AND CENTER


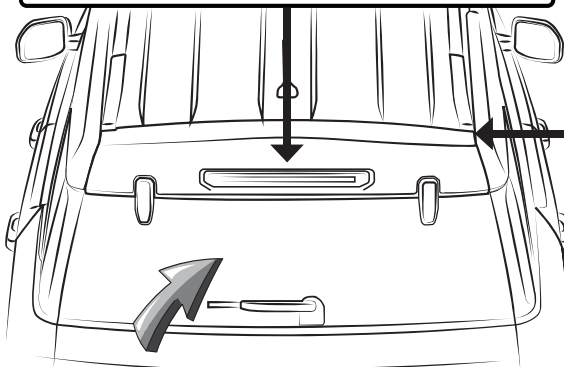


PLACE JUST OVER  
THE RADIUS

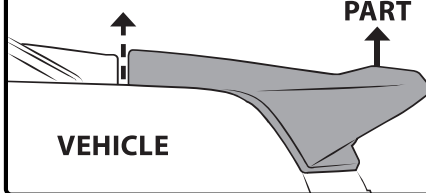

VEHICLE

PART

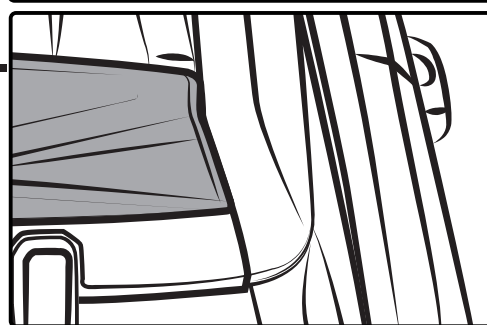


# ROOF SPOILER - BRONCO SPORT 2021

## INSTALLATION MANUAL

### 3 MARK


**DRAW HASH MARK WITH GREASE PENCIL ON ROOF SPOILER AND SHEET METAL, THIS WILL ENSURE ROOF SPOILER WILL BE CENTERED TO GREASE PENCIL OUTLINE.**

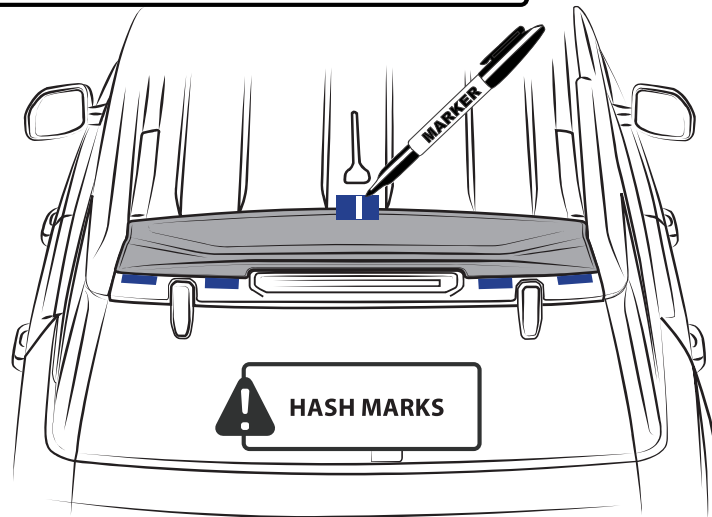

### 4 REMOVE THE PART




**WARM SURFACES WITH HEAT GUN IF SURFACE TEMPERATURE IS TOO COLD**

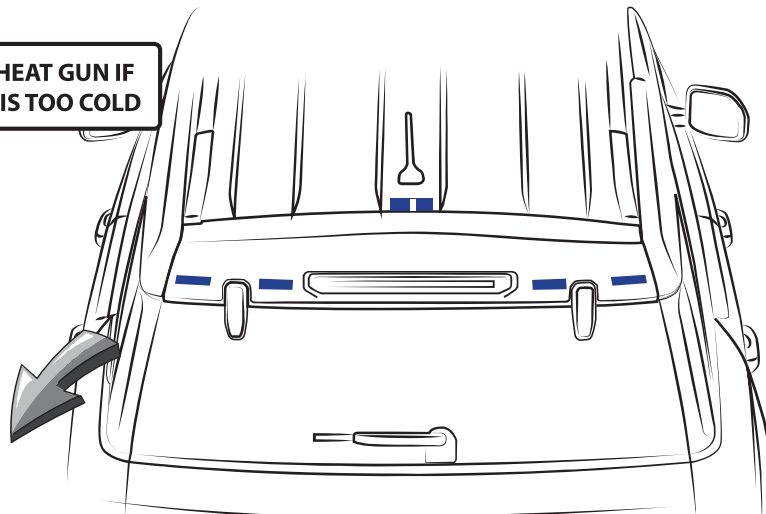


## 5 CLEAN THE ADHESIVE CHANNEL





**! CLEAN THOROUGHLY TO ENSURE PROPER ADHESION**

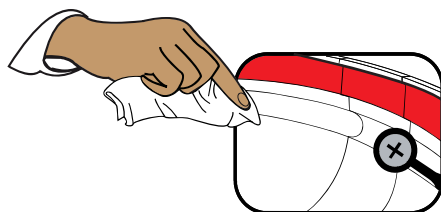

## 6 APPLY POLYURETHANE ADHESIVE

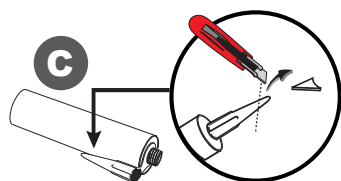


**! POLYURETHANE ADHESIVE MUST NEVER TOUCH DOUBLE SIDED TAPE**

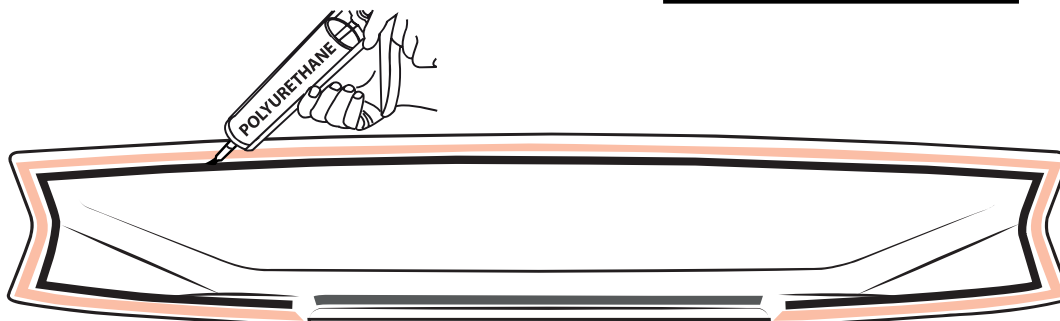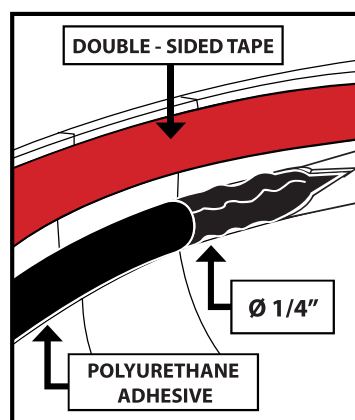


# ROOF SPOILER - BRONCO SPORT 2021

## INSTALLATION MANUAL

### 7 PEEL THE LINER




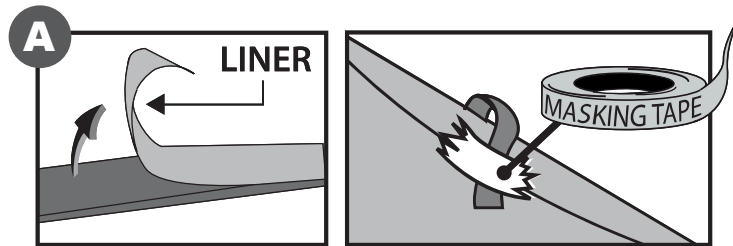


**! STICK THE LINER LEAD ON THE OUTSIDE OF THE PART**

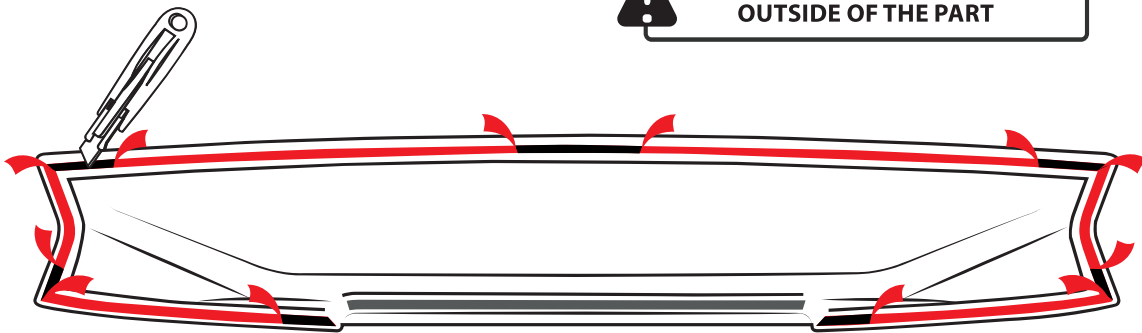


### 8 PLACE


**! ALIGN WITH MARKINGS**

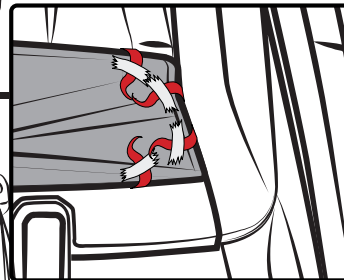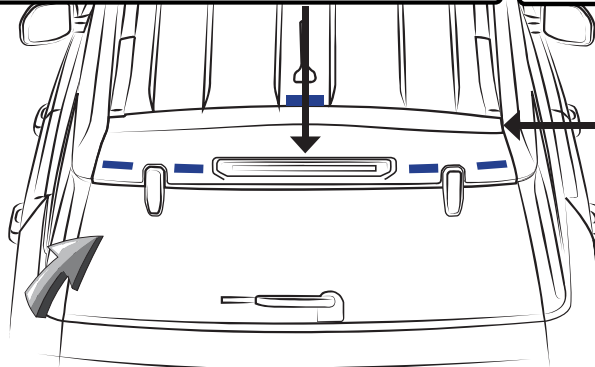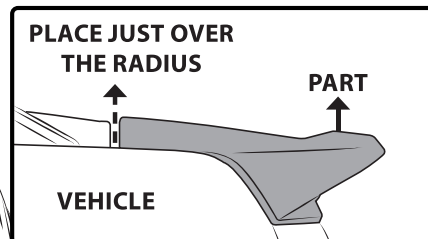

## 9 REMOVE LINER

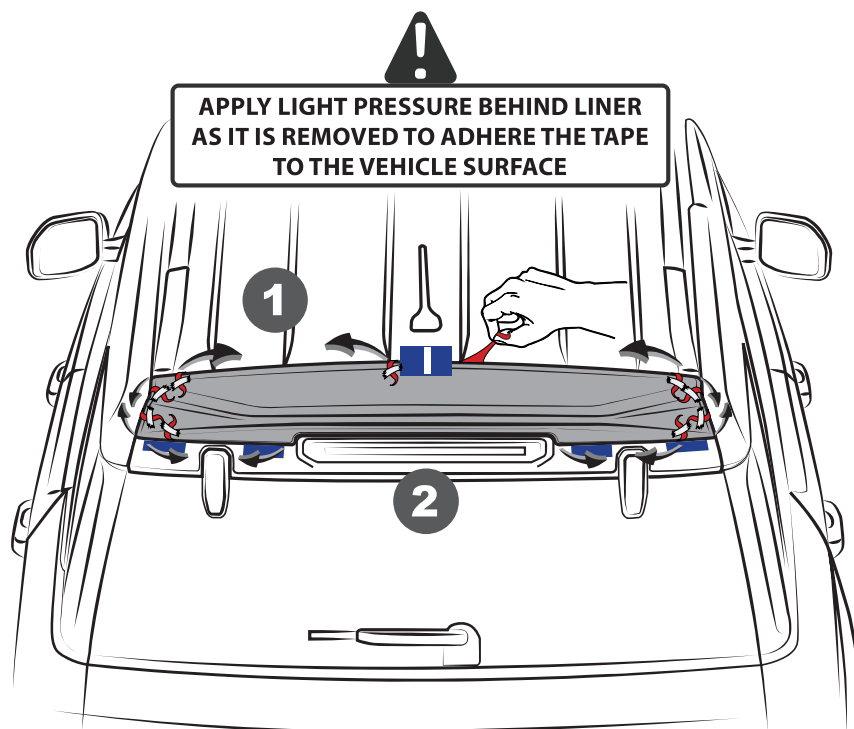

## 10 PRESS FIRMLY

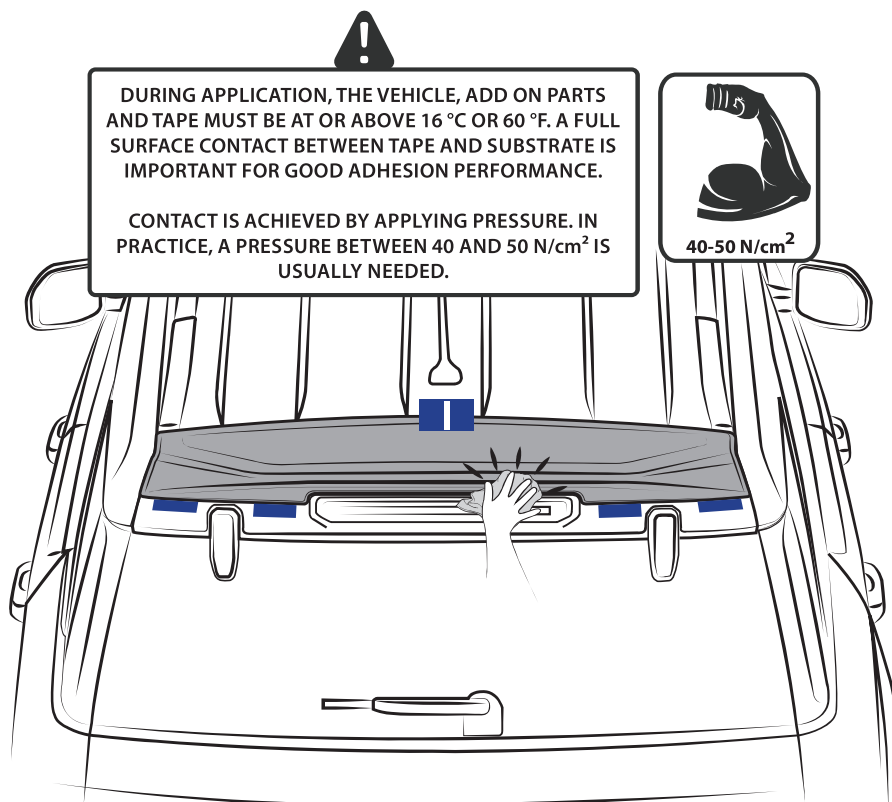


# ROOF SPOILER - BRONCO SPORT 2021

## INSTALLATION MANUAL

### 11 CLEAN




**REMOVE MASKING  
TAPE AND CLEAN**

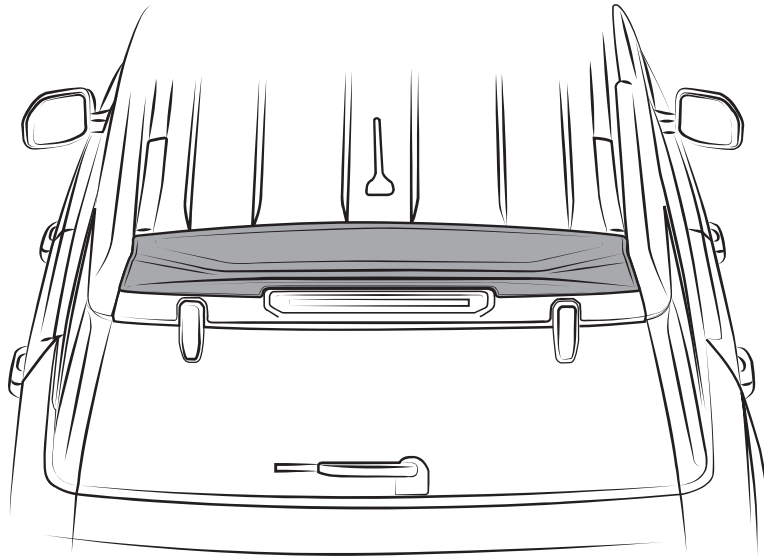

**REPEAT ALL STEPS  
FOR RH SIDE**

### INSTALLED PART

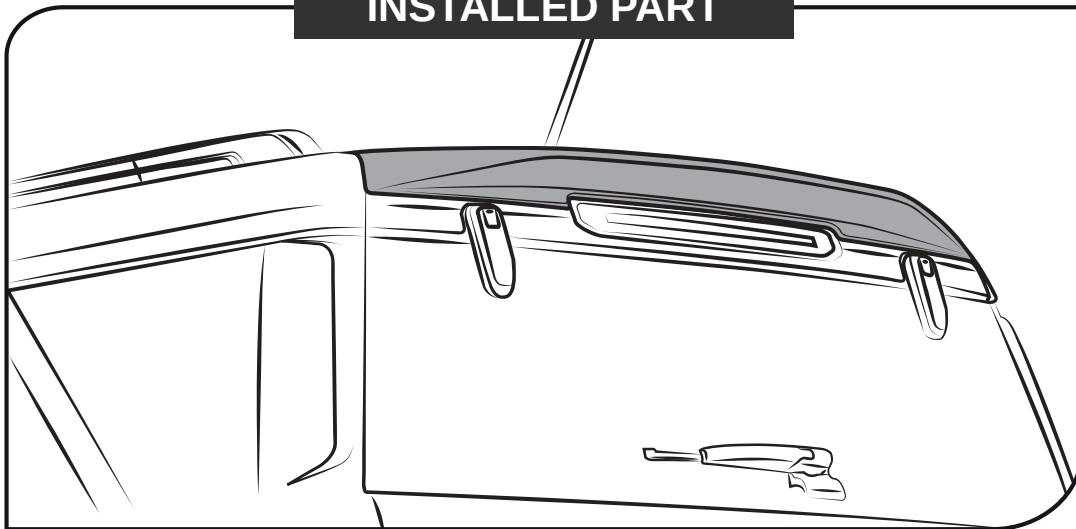



## LIMITED WARRANTY

All Ford part numbers provided by AIR DESIGN USA LLC are warranted to be free from defects in materials or workmanship on products properly installed per the installation instructions provided with the product. This warranty covers repair or replacement of any defective product at no charge during the applicable warranty period listed below. Labor for replacement or service of defective product is not paid or reimbursed by AIR DESIGN USA LLC.

WARRANTY PERIOD		
	USA	Outside USA
Product which appears on New Vehicle Monroney Label (window stickers)	Coverage which matches new vehicle warranty--- Ford - 3 years or 36,000 miles whichever comes first; Lincoln 4 years or 50,000 miles whichever comes first	Coverage which matches new vehicle warranty--- Ford - 3 years or 60,000 kilometers whichever comes first; Lincoln 4 years or 80,000 km whichever comes first
Part purchased and installed during or after the original vehicle warranty	Whichever of the following options which provides the greater benefit to the customer: 1) 2 years / unlimited miles or 2) The remainder of the new vehicle warranty	Whichever of the following options which provides the greater benefit to the customer: 1) 2 years / unlimited kilometers or 2) The remainder of the new vehicle warranty

This limited warranty does not cover any damage, defect or malfunction caused by misuse, abuse, accident, improper installation, modification or improper or lack of maintenance. Incidental and consequential damages are not recoverable under this warranty. This warranty offers you specific legal rights. You may have additional or other rights as which vary from state to state or province to province.

If you experience a warranty issue with this product please visit your Ford dealer. If the repair is covered by the warranty above and completed by the dealership, labor is also covered by Ford -- Ford Warranty and Policy -- Section 3

### Note to dealer:

Ford dealers should contact Air Design USA LLC by phone at: **+1 (760) 435 0095** and ask to speak to the warranty administrator or by email to: **billy@airdesignusa.com**