


Connector:	Description	Color	Harness	Base Part #	Service Pigtail
C1035A	BATTERY JUNCTION BOX (BJB)		14290	part# N/A	Not Available

Check for Terminal Part Numbers

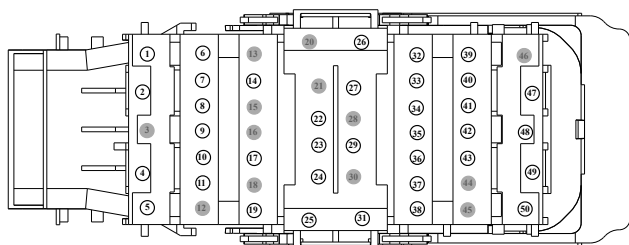

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CE226 (YE-VT)	22	ECU - POWERTRAIN # FUEL PUMP ON/OFF (FP) +	
2	CBB50 (YE-OG)	10	FUSE - 50 OR CIRCUIT BREAKER	
3	*	*	Not Used	
4	CBB04 (VT-RD)	14	FUSE - 4 OR CIRCUIT BREAKER	
5	CAC13 (BU-OG)	20	RELAY - UPFITTER #5	
6	CBB51 (BN)	18	FUSE - 51 OR CIRCUIT BREAKER	
7	CDC54 (WH-GN)	22	ECU - POWERTRAIN # STARTER MOTOR CONTROL SENSE (SMCS)	
8	CDC12 (YE)	22	ECU - POWERTRAIN # STARTER MOTOR CONTROL (SMC)	
9	SBB37 (GY-RD)	14	FUSE - 37 OR CIRCUIT BREAKER	
10	CE230 (WH-OG)	22	ECU - POWERTRAIN # FUEL PUMP RELAY CONTROL (FPRC)	
11	CBBJ3 (BN-YE)	18	FUSE - 183 OR CIRCUIT BREAKER	
12	*	*	Not Used	
13	*	*	Not Used	
14	CH402 (YE-GN)	22	RELAY - FRONT BLOWER	
15	*	*	Not Used	
16	*	*	Not Used	
17	CRH04 (VT-GN)	20	ECU - RELAY HORN	
18	*	*	Not Used	
19	CBBC0 (YE-GN)	18	FUSE - 120 OR CIRCUIT BREAKER	
20	*	*	Not Used	
21	*	*	Not Used	
22	CBB12 (GN-WH)	20	FUSE - 12 OR CIRCUIT BREAKER	
23	CBB86 (WH-BU)	20	FUSE - 86 OR CIRCUIT BREAKER	
24	SBB30 (BN-RD)	14	FUSE - 30 OR CIRCUIT BREAKER	
25	SBB01 (RD)	10	FUSE - 1 OR CIRCUIT BREAKER	
26	SBB91 (BU-RD)	10	FUSE - 91 OR CIRCUIT BREAKER	
27	SBB31 (WH-RD)	14	FUSE - 31 OR CIRCUIT BREAKER	
28	*	*	Not Used	
29	SBB39 (WH-RD)	14	FUSE - 39 OR CIRCUIT BREAKER	
30	*	*	Not Used	
31	SBB29 (GY-RD)	8	FUSE - 29 OR CIRCUIT BREAKER	
32	CBB02 (GN)	14	FUSE - 2 OR CIRCUIT BREAKER	
33	CDC55 (GY)	22	RELAY - RUN START	
34	CBP37 (WH)	14	FUSE - 37 OR CIRCUIT BREAKER	

Pin	Circuit	Gauge	Circuit Function	Qualifier
35	CBB21 (BU-GY)	20	FUSE - 21 OR CIRCUIT BREAKER	
36	CBBG0 (YE-GN)	18	FUSE - 160 OR CIRCUIT BREAKER	
37	SDC02 (RD)	20	BATTERY - # PLUS	Late production
38	CBB15 (BN-BU)	16	FUSE - 15 OR CIRCUIT BREAKER	
39	CE341 (VT-GY)	22	ECU - POWERTRAIN # IGNITION SWITCH POSITION RUN (ISP-R)	
40	CBB23 (BN-YE)	20	FUSE - 23 OR CIRCUIT BREAKER	
41	SDC02 (RD)	20	BATTERY - # PLUS	Late production
42	SBB93 (GY-RD)	22	FUSE - 93 OR CIRCUIT BREAKER	
43	SBBD7 (RD)	14	FUSE - 137 OR CIRCUIT BREAKER	
44	*	*	Not Used	
45	*	*	Not Used	
46	*	*	Not Used	
47	CBB83 (GY)	14	FUSE - 83 OR CIRCUIT BREAKER	
48	CAC03 (WH-VT)	20	SWITCH - UPFITTER RELAY #3	
49	SBB36 (GN-RD)	8	FUSE - 36 OR CIRCUIT BREAKER	
50	CBB11 (BN)	14	FUSE - 11 OR CIRCUIT BREAKER	