


Connector:	Description	Color	Harness	Base Part #	Service Pigtail
C1035B	BATTERY JUNCTION BOX (BJB)		14290	part# N/A	Not Available

Check for Terminal Part Numbers

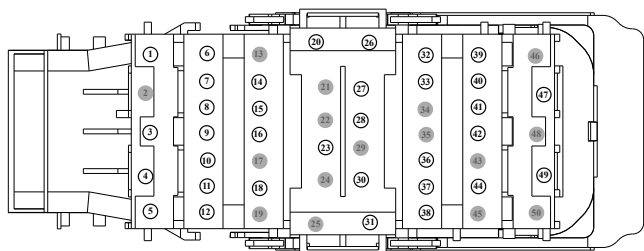

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CRW23 (VT-GN)	16	RELAY - REAR WASHER	
2	*	*	Not Used	
3	GD120 (BK-GN)	18	GROUND - FENDER FRONT LEFT	
4	CBB54 (VT-OG)	8	FUSE - 54 OR CIRCUIT BREAKER	
5	CBBC4 (VT-RD)	22	FUSE - 124 OR CIRCUIT BREAKER	
6	CAC04 (WH-BU)	20	SWITCH - UPFITTER RELAY #4	
7	CBB33 (WH-BN)	16	FUSE - 33 OR CIRCUIT BREAKER	
8	CBB32 (GN-VT)	16	FUSE - 32 OR CIRCUIT BREAKER	
9	CBB71 (BU-OG)	16	FUSE - 71 OR CIRCUIT BREAKER	
10	CRW34 (BU-BN)	22	ECU - REAR WASHER	
11	CDC64 (WH-BU)	22	RELAY - RUN ACCESSORY	
12	CBB69 (WH-VT)	14	FUSE - 69 OR CIRCUIT BREAKER	
13	*	*	Not Used	
14	CBB34 (VT-BN)	16	FUSE - 34 OR CIRCUIT BREAKER	
15	VDN18 (VT-GY)	22	ECU - LIN BUS # BCM 10	
16	CE302 (YE-BU)	18	ECU - POWERTRAIN # POWERTRAIN CONTROL RELAY (PCMRC)	
17	*	*	Not Used	
18	CH302 (WH-BN)	22	ECU - POWERTRAIN # A/C CLUTCH CONTROL RELAY / WOT AC CUTOFF (ACCR)	
19	*	*	Not Used	
20	CBB47 (GN-BU)	8	FUSE - 47 OR CIRCUIT BREAKER	
21	*	*	Not Used	
22	*	*	Not Used	
23	CBBD9 (BN-WH)	22	FUSE - 139 OR CIRCUIT BREAKER	
24	*	*	Not Used	
25	*	*	Not Used	
26	CBB13 (GY-BN)	10	FUSE - 13 OR CIRCUIT BREAKER	
27	CLF03 (VT-OG)	22	ECU - BEAM HIGH RIGHT	
28	CBBC5 (YE)	22	FUSE - 125 OR CIRCUIT BREAKER	
29	*	*	Not Used	
30	CAC02 (GY-BN)	20	SWITCH - UPFITTER RELAY #2	
31	SBB28 (GN-RD)	10	FUSE - 28 OR CIRCUIT BREAKER	
32	CBBF7 (WH)	16	FUSE - 157 OR CIRCUIT BREAKER	
33	CBBF8 (GY-BU)	16	FUSE - 158 OR CIRCUIT BREAKER	
34	*	*	Not Used	
35	*	*	Not Used	

Pin	Circuit	Gauge	Circuit Function	Qualifier
36	SBB06 (VT-RD)	14	FUSE - 136 OR CIRCUIT BREAKER	
37	CBB27 (GN-BN)	20	FUSE - 27 OR CIRCUIT BREAKER	
38	CBB22 (GN-OG)	22	FUSE - 22 OR CIRCUIT BREAKER	
39	CBB06 (WH-BU)	16	FUSE - 6 OR CIRCUIT BREAKER	
40	CBB07 (GN-BU)	18	FUSE - 7 OR CIRCUIT BREAKER	
41	CBB08 (GY-YE)	18	FUSE - 8 OR CIRCUIT BREAKER	
42	CBB09 (VT-GY)	18	FUSE - 9 OR CIRCUIT BREAKER	
43	*	*	Not Used	
44	SBBJ6 (YE-RD)	20	FUSE - 186 OR CIRCUIT BREAKER	
45	*	*	Not Used	
46	*	*	Not Used	
47	CBB85 (YE)	14	FUSE - 85 OR CIRCUIT BREAKER	
48	*	*	Not Used	
49	CBB84 (VT-RD)	8	FUSE - 84 OR CIRCUIT BREAKER	
50	*	*	Not Used	