


Connector:	Description	Color	Harness	Base Part #	Service Pigtail
C2280D	BODY CONTROL MODULE (BCM)	BK	14401	part# N/A	Not Available

Check for Terminal Part Numbers

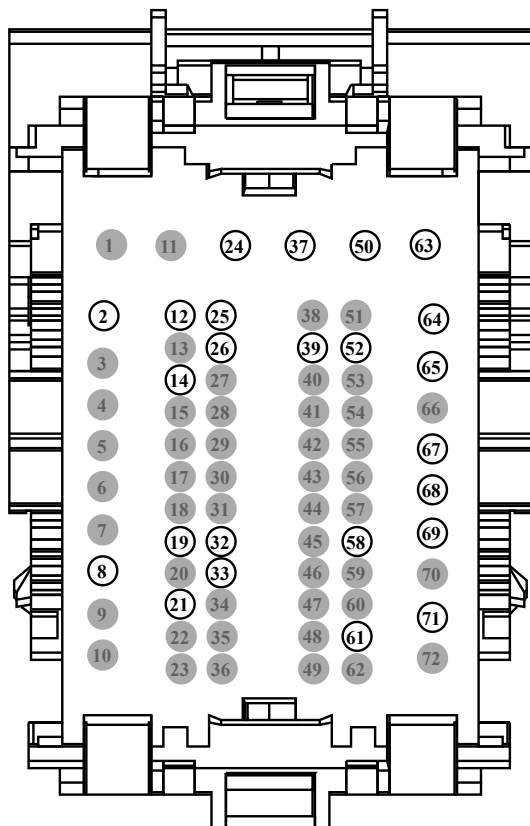

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	*	*	Not Used	
2	SBP11 (BU-RD)	20	FUSE - 11 OR CIRCUIT BREAKER	
3	*	*	Not Used	
4	*	*	Not Used	
5	*	*	Not Used	
6	*	*	Not Used	
7	*	*	Not Used	
8	CCB08 (VT-WH)	22	SWITCH - BRAKE ON/OFF (BOO) NORMAL OPEN	
9	*	*	Not Used	
10	*	*	Not Used	
11	*	*	Not Used	
12	CLS32 (BN-YE)	22	SWITCH - HAZARD	
13	*	*	Not Used	
14	VLN04 (VT-GY)	20	ECU - IP/SWITCH ILLUMINATION	
15	*	*	Not Used	
16	*	*	Not Used	
17	*	*	Not Used	
18	*	*	Not Used	
19	CRT36 (BU-GY)	22	ECU - WIRELESS CHARGE ENABLE/DISABLE	
20	*	*	Not Used	
21	CPK34 (GN-WH)	22	ECU - KEYLESS VEHICLE # SWITCH START/STOP 1 +	
22	*	*	Not Used	
23	*	*	Not Used	
24	SBP04 (GN-RD)	22	FUSE - 4 OR CIRCUIT BREAKER	
25	CPL45 (BN)	22	SWITCH - LIFTGATE/DECKLID/TAILGATE RELEASE	
26	RRH02 (GN-WH)	22	ECU - SWITCH HORN	
27	*	*	Not Used	
28	*	*	Not Used	
29	*	*	Not Used	
30	*	*	Not Used	
31	*	*	Not Used	
32	VDN15 (BU-GY)	22	ECU - LIN BUS # BCM 7	
33	VPL56 (BU-GY)	22	RECEIVER - REMOTE RF	
34	*	*	Not Used	
35	*	*	Not Used	
36	*	*	Not Used	
37	SBP23 (WH-RD)	14	FUSE - 23 OR CIRCUIT BREAKER	
38	*	*	Not Used	
39	RLF14 (GY-BN)	22	SENSOR - AUTOLAMP DAY/NIGHT (AMBIENT LIGHT) -	
40	*	*	Not Used	
41	*	*	Not Used	
42	*	*	Not Used	
43	*	*	Not Used	
44	*	*	Not Used	

Pin	Circuit	Gauge	Circuit Function	Qualifier
45	*	*	Not Used	
46	*	*	Not Used	
47	*	*	Not Used	
48	*	*	Not Used	
49	*	*	Not Used	
50	SBP17 (RD)	18	FUSE - 17 OR CIRCUIT BREAKER	
51	*	*	Not Used	
52	VLF14 (BU-BN)	22	SENSOR - AUTOLAMP DAY/NIGHT (AMBIENT LIGHT) +	
53	*	*	Not Used	
54	*	*	Not Used	
55	*	*	Not Used	
56	*	*	Not Used	
57	*	*	Not Used	
58	CLS80 (GY-BU)	22	SWITCH - WORK LAMP REAR	
59	*	*	Not Used	
60	*	*	Not Used	
61	CPK35 (YE-OG)	22	ECU - KEYLESS VEHICLE # SWITCH START/STOP 2 +	
62	*	*	Not Used	
63	SBP10 (YE-RD)	16	FUSE - 10 OR CIRCUIT BREAKER	
64	SBP21 (GY-RD)	22	FUSE - 21 OR CIRCUIT BREAKER	
65	SBP22 (BN-RD)	20	FUSE - 22 OR CIRCUIT BREAKER	
66	*	*	Not Used	
67	CBP15 (BN-BU)	22	FUSE - 15 OR CIRCUIT BREAKER	
68	CBP09 (VT-GY)	22	FUSE - 9 OR CIRCUIT BREAKER	
69	CBP08 (GY-YE)	20	FUSE - 8 OR CIRCUIT BREAKER	
70	*	*	Not Used	
71	CBP01 (BU)	22	FUSE - 1 OR CIRCUIT BREAKER	
72	*	*	Not Used	